



DUAL PURPOSE SLIDE VALVES



Divert airflow from idle workstations to active ones



Switch dust collector on/off remotely

FEATURES

- Get more air at your active workstation by diverting it from idle ones
- Start/stop your unit remotely from each workstation
- Connect as many ASVs as needed to one dust collector
- Dust collector will continue to operate as long as one valve is open
- Can connect to 1.5", 2" or 3" hose diameters
- Two series available*: basic (AA413) and with stand (AA433)
- Clamp or bolt ASVs directly to workbench

* For part numbers, see table on next page.



INCLUDED:
20' remote cable

OPTIONAL:
• Table/Stand Support Bracket for AA413 series (#AA423)

NOTE: In order to connect the ASV(s) to the dust collector, one DB9 cable per dust collector will be provided, free of charge.

AUTOSTART SLIDE VALVES



ASV READY DUST COLLECTORS

- | | |
|------------------------|-------------------|
| iVAC 2.B Compact | PowerStation 3 |
| iVAC 2.B Infinity | CollectAll |
| iVAC 2.B TWIN Infinity | SolderPure |
| JetStream ASV | MonoPure |
| JetStream Brushless | MedEVAC MultiPure |
| PGR SuperFlow | |



AA433 SERIES (ASV with stand)

		FRONT Hose Diameter		
		1.5"	2"	3"
REAR Hose Diameter	1.5"	AA433-A11-20	AA433-A21-20	AA433-A31-20
	2"	AA433-A12-20	AA433-A22-20	AA433-A32-20
	3"	AA433-A13-20	AA433-A23-20	AA433-A33-20



AA413 SERIES (ASV without stand)

		FRONT Hose Diameter		
		1.5"	2"	3"
REAR Hose Diameter	1.5"	AA413-A11-20	AA413-A21-20	AA413-A31-20
	2"	AA413-A12-20	AA413-A22-20	AA413-A32-20
	3"	AA413-A13-20	AA413-A23-20	AA413-A33-20

ASV Wiring and Operation



Installation:

1. Run wire from ASV to unit
2. Connect the DB9 connector on the AE750 cable to the appropriate socket on the unit
3. Connect **BLACK** wire from ASV to **BLACK** wire from AE750
4. Connect **RED** wire from ASV to **RED** wire from AE750
5. If you have more than 1 ASV, connect all **BLACK** wires together and all **RED** wires together

Operation:

- Dust collector **STARTS** automatically if **AT LEAST ONE ASV** is **OPEN**
- Dust Collector **STOPS** automatically if **ALL ASVs** are **CLOSED**